

### Special tool

---

Clamp for fuel hose




000 589 40 37 00

---

### Removal


---

- 1 Unscrew protective case.
- 2 Pinch fuel intake hose (arrow) with a clamp.

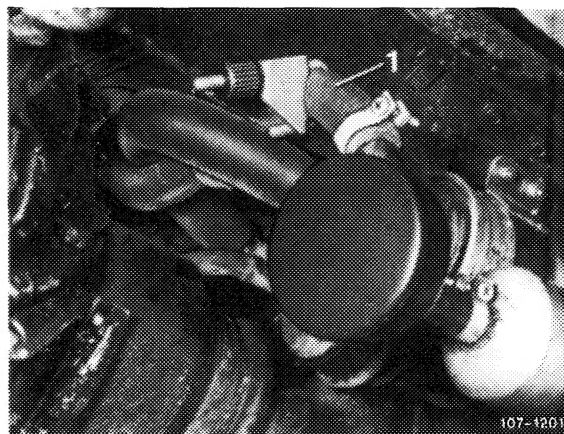


### 1st version

- 3 Pinch fuel feed hose.
- 4 Unscrew both fuel hoses on fuel reservoir, also pinch leak hose, loosen and pull off.
- 5 Loosen fastening screws (arrow) for clamp and remove fuel reservoir.
- 6 For installation proceed vice versa. Pay attention to correct connection of fuel hoses, fasten fuel feed hose to center connection of fuel reservoir.

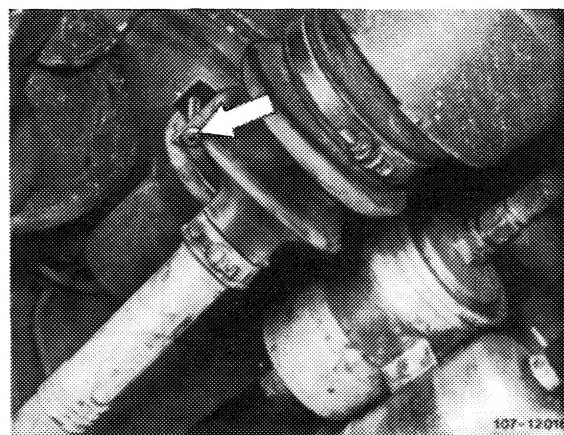


- 2 Fuel feed line
- 4 Mounting bracket
- 5 Anti-vibration buffer
- 6 Holder
- 7 Snap ring
- 8 Nut
- 9 Hollow screw
- 10 Sealing ring
- 11 Fuel hose
- 12 Fuel hose
- 13 Hose clamp
- 14 Fuel reservoir
- 15 Holder
- 16 Nut
- 17 Screw
- 18 Protective case
- 19 Fuel hose
- 20 Fuel hose
- 21 Fuel filter
- 22 Fuel pump
- 23 Fuel hose
- 24 Damper

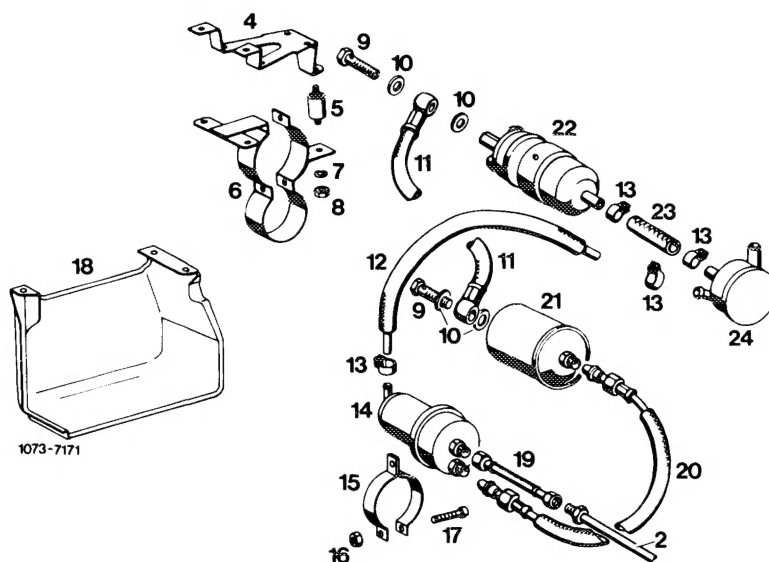

## 2nd version

7 Unscrew fuel line on fuel reservoir, also pinch leak hose, loosen and pull off.

8 Loosen fastening screw (arrow) for clamp and remove fuel reservoir.

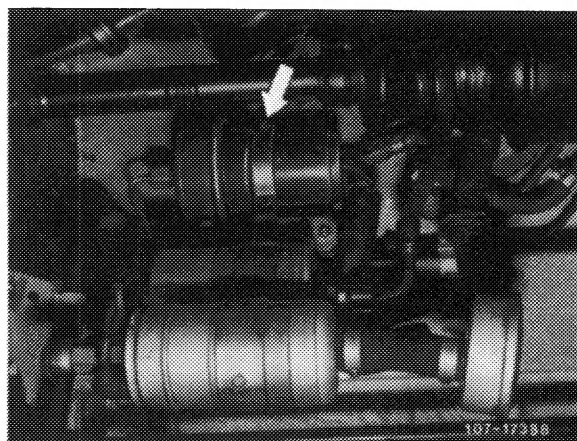

## Installation

9 For installation proceed vice versa.

10 Remove clamp on fuel suction hose.


11 Run engine and check for leaks.


12 Mount protective case.

**Note:** On model 126, measure distance between fuel reservoir and body floor as shown in Fig.

Nominal dimension = 62 mm.

If required, push fuel reservoir in upward direction. For this purpose, apply manual counterhold against fuel pump.

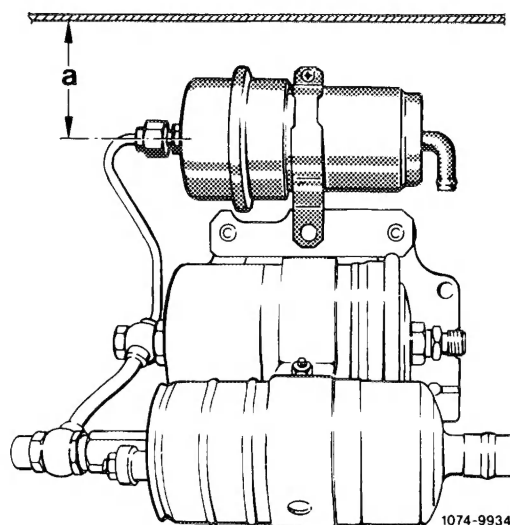

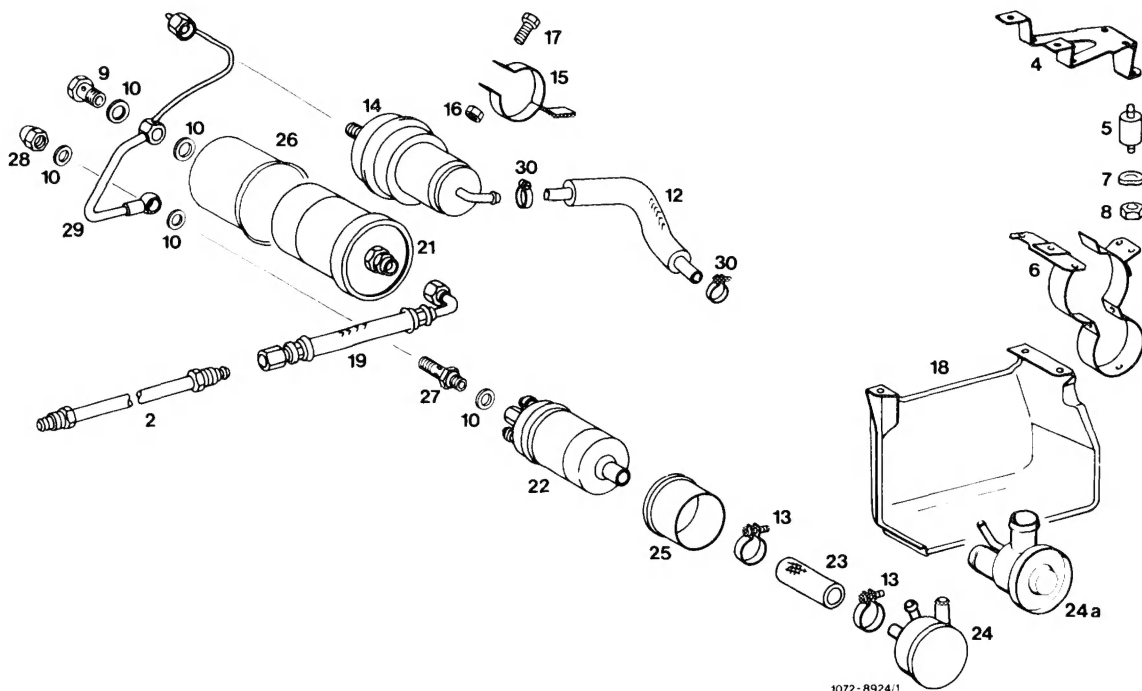

- |                         |                                  |
|-------------------------|----------------------------------|
| 2 Fuel feed line        | 18 Protective case               |
| 4 Mounting bracket      | 19 Fuel hose                     |
| 5 Anti-vibration buffer | 21 Fuel filter                   |
| 6 Holder                | 22 Fuel pump                     |
| 7 Snap ring             | 23 Fuel hose                     |
| 8 Nut                   | 24 Damper 1st version            |
| 9 Hollow screw          | 24a Diaphragm damper 2nd version |
| 10 Sealing ring         | 25 Plastic sleeve                |
| 12 Fuel hose            | 26 Plastic sleeve                |
| 13 Hose clamp           | 27 Check valve                   |
| 14 Fuel reservoir       | 28 Cap nut                       |
| 15 Holder               | 29 Steel line                    |
| 16 Nut                  | 30 Hose clamp                    |
| 17 Screw                |                                  |